

COMFORT RIDE CRCV CONTROL VALVES

Installation Instructions

Required equipment:


Safety Stands

Hose Cutters

Warning:

Vehicle must be placed securely on safety stands (*properly rated for motorhome use*) or over a work pit before any work is performed!

Due to low clearance, severe injury or death can occur if an individual is underneath motorhome when air is adjusted or drained from system.

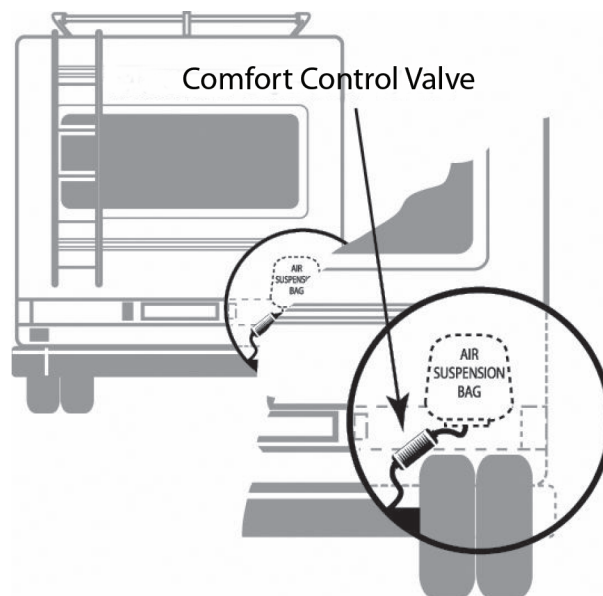


1. Move the coach to a level, flat surface. Drive the coach onto approximately 4" blocks. Set the brakes. Or you may drive the

coach over a work pit and chock the front wheels. Block off adequate space at the rear of the coach to work.

2. Deflate the air springs.
3. *(Recommend using a hose cutting tool.)* Cut air lines approximately 3" -6" from the air bag outlet/inlet (*as close to the bag as workable*) with a clean & precise 90 degree cut.

Note: Possible leaks can occur if the air line is not cut precisely or is not perfectly clean of all debris.

4. Install the Comfort Ride Valve in place. Push tubing firmly into each port of the Ride Valve to avoid air leaks. The tubing will lock into place.
5. Inflate the air springs and check for leaks with a water and soap mixture.

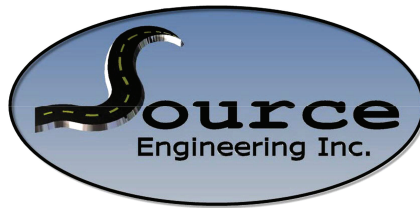

Source Engineering Inc.
90971 Roberts Rd.
Coburg, OR 97486
541-343-0293